


HomeGuard 200 Hookup Procedures

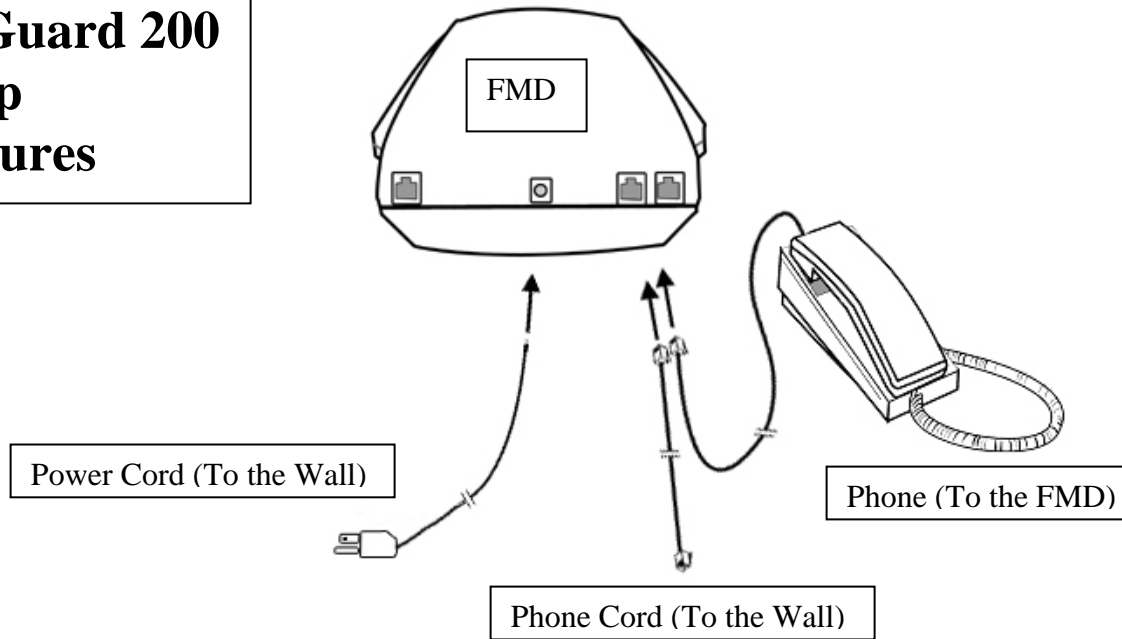

- Place the FMD on a solid surface 2-3 feet off the ground.
- Unplug your telephone from the wall and plug it into the FMD.
- Plug the telephone cord from the FMD to the phone jack in the wall.
- Plug the power cord from the FMD to the power jack in the wall.
- Do NOT answer/use the phone for 15 minutes. (The phone will ring).
- During the hookup process, the FMD will make some noises and lights will flash.
- After the hookup is complete, make sure the green light is solid green (not blinking) unless there is a power outage in your neighborhood. Check to make sure at least 2x/day.